

# ultravent®

## Installation instructions

### 1. Choose a suitable location for the Ultravent.

Installation should be through an external wall towards an upper or lower corner of the room.

### 2. Create a suitable aperture through the wall.

127mm core drill is required.

### 3. Place filter into the centre of the cavity liner.

Red strip uppermost and label visible from inside the room.

### 4. Connect outer cowl into the cavity liner.

### 5. Position Ultravent through the wall aperture.

Cut liner to required length.  
Seal to external brickwork as necessary.

### 6. Insert internal grill into the cavity liner.

Seal liners together with mastic if required.  
Push grill firmly against internal plasterwork.



High rise cowl



Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent supplier.