


SIMPLE AND EFFICIENT



The CHIMELLA is a chimney draught excluder that has been designed to be simple and efficient in its operation and can be used by anyone in under a minute.

This revolutionary British product has been designed with patent pending technology to fit a wide variety of square and rectangular chimney flues and is designed to block of your chimney when your fire is NOT IN USE.

ONLY 3 MEASUREMENTS

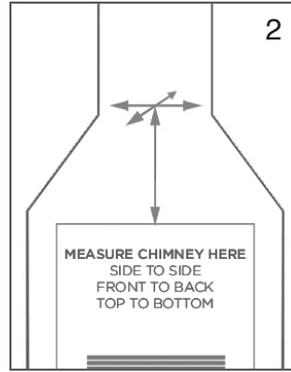


A Standard Size Chimney Umbrella has been designed to fit all square and rectangle flue sizes between 200mm x 200mm and 380mm x 380mm.

Please confirm that your chimney flue falls within these sizes.

Measure inside your chimney SIDE TO SIDE & FRONT TO BACK at the narrowest part of your chimney flue (usually about 600mm or 700mm above the fireplace opening). FINALLY measure up to narrowest part of the flue from the top of the fireplace opening. This will help you to calculate where to hold the Chimella before releasing the canopy to the desired height in your chimney.

GETTING IN POSITION

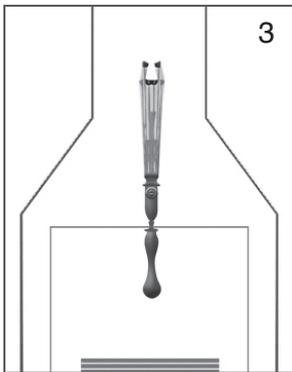


Hold the CHIMELLA in position with one hand on the release button.

The top of the release button should be directly below the flue opening and about 620mm below the narrowest part of the flue.

The button should be facing you directly to ensure that the canopy arms reach the corners of the flue when it is released.


Keeping the Chimney Umbrella pointing directly under the flue opening is essential to the successful launch of your chimney-blocking device.

SIMPLICITY ITSELF

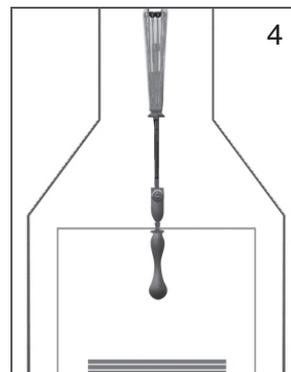


With a simple push of the release button with your thumb the patent pending technology allows the extendable shaft to reach its full extension up the chimney before deploying the canopy open to hold itself in place in under a minute.

PATENT PENDING

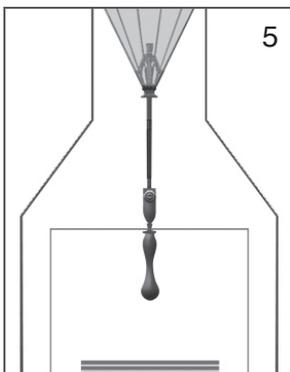

When the extendable shaft reaches its full extension the patent pending technology allows the chimney blocker canopy to open fully and hold itself in place.

THE CHIMELLA TWIST

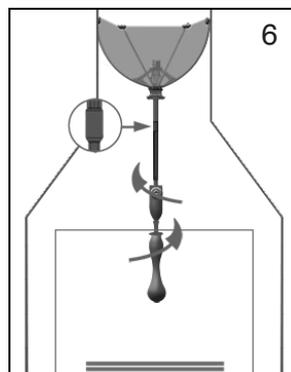

Once in place simply twist the release button to left and then to the right just to ensure that the corner canopy arms are pushed securely into the corners of the flue and producing a better seal. If you need to get an extra tight fit you can simply reach up the shaft with your other hand until you get about half way up where you can grip the top piece of the extendable shaft to hold it in place. With your other hand gently pull down on the button handle and this will squeeze the canopy arms tighter to the walls. Gently.


PEACE OF MIND



CHIMELLA'S display handle has been designed so it can always be on view at a position of your choice.

Simply hold the release button in one hand and pull down gently on the display handle with the other hand and extend down. The display handle is also flexible to move forward or backwards without effecting the position of the canopy and can help when inserting and removing from the flue. A beautifully sculptured handle on permanent display over your fire grate to remind you that your chimney is now blocked, Saving you Energy and Saving You Money while adding a touch of style to the heart of your home when your fire is NOT IN USE.


SAFE AND EFFICIENT

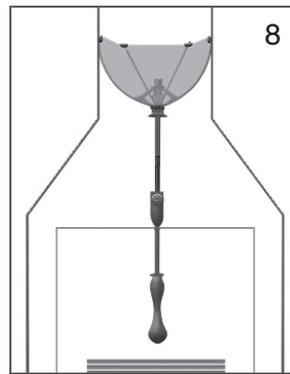

That's It!


With the canopy now holding itself in position against the inner walls of your chimney flue your CHIMNEY UMBRELLA has blocked off your chimney opening and immediately starts to Save You Energy and Money...The Stylish Way.

STARTING A FIRE

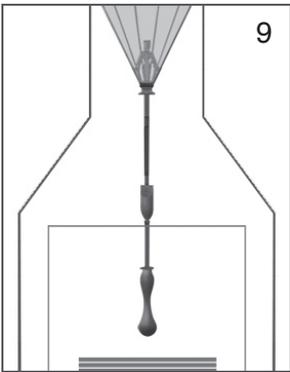


Before you start your fire simply hold the release button and push the button again. The canopy will release itself instantly from the sides of the flue and will close any loose dirt safely and efficiently into the canopy.

REMOVES IN AN INSTANT

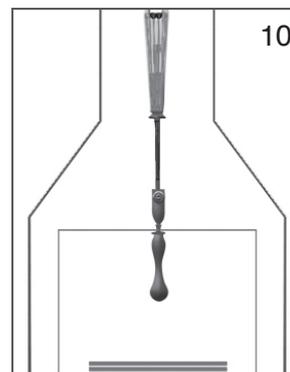

Push the extended display handle up towards the release button and pull the CHIMELLA down and out of the fireplace opening. As any dirt is now safely and cleanly held in the canopy you can take it away and dispose of it into a bin efficiently with NO MESS.

INSTANT RELOAD

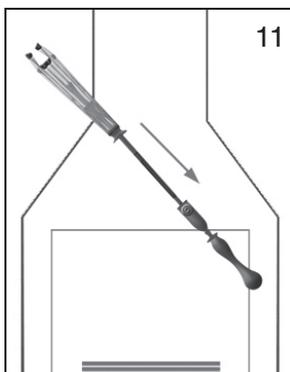

Hold the nest area at the bottom of the canopy in one hand and the button handle in the other. Push the nest area towards and into the top of the button handle until you feel a quality clunk! Your CHIMNEY UMBRELLA is now loaded and ready to insert into your chimney again when your fireplace is not in use.

Mmmm ...cosy



Simple and efficient. You are now ready to make your fire and light up the HEART OF YOUR HOME.