

# ultravent<sup>®</sup>

## Installation instructions

### 1. Choose a suitable location for the Ultravent.

Installation should be through an external wall towards an upper or lower corner of the room.

### 2. Create a suitable aperture through the wall.

Approximately 225mm wide by 150mm high.

### 3. Place filter into the centre of the cavity liner.

Red strip uppermost and label visible from inside the room.


### 4. Connect air brick into the cavity liner.

### 5. Position Ultravent through the wall aperture.

Air brick to finish flush with external brickwork and pointed as necessary.

### 6. Insert internal grill into the cavity liner.

Seal liners together with mastic if required.  
Push white grill firmly against internal plasterwork.

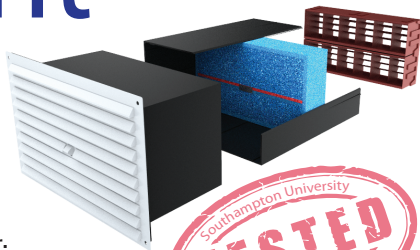

Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent supplier.