

ultravent®

Installation instructions

1. Choose a suitable location for the Ultravent.

Installation should be through an external wall towards an upper or lower corner of the room.

2. Create a suitable aperture through the wall.

Approximately 225mm wide by 150mm high.

3. Place filter into the centre of the cavity liner.

Red strip uppermost and label visible from inside the room.


4. Connect air brick into the cavity liner.

5. Position Ultravent through the wall aperture.

Air brick to finish flush with external brickwork and pointed as necessary.

6. Insert internal grill into the cavity liner.

Seal liners together with mastic if required.
Push white grill firmly against internal plasterwork.

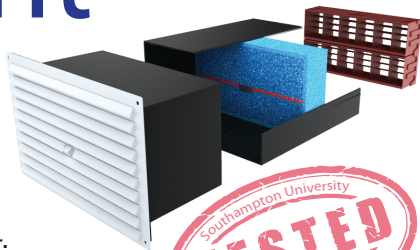

Clean filter with a damp cloth and replace every 2 years.

Full product data sheet & replacement filters available from your Ultravent supplier.