


**Spring Countertop Water Filtration System
Cartridge Replacement Instructions**

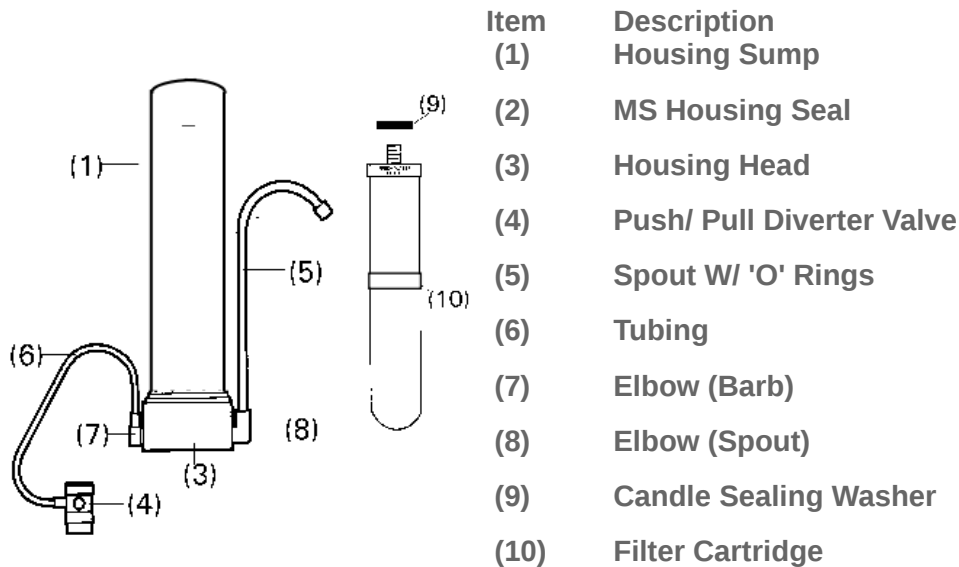

- 1) Leave the cold tap turned off, hold the filter unit upside-down over the sink unit.
- 2) Unscrew the housing sump (1) from the housing head (3) which will be full of water.
- 3) The cartridge (10) can now be unscrewed from the housing head (3)
- 4) Unwrap the replacement cartridge and install
- 5) Run the water to waste for a minimum of 5 minutes to 10 minutes to clear the system.
- 6) Check very carefully the entire installation for leaks. The filter is now ready for general use.

NOTE - It is quite safe to dispose of the used cartridges by wrapping in paper and placing in a waste bin.

Free Cartridge Reminder Service

The cartridge in your Spring filter should be changed every six months. When you purchase a filter/ cartridge from us you are automatically added to a free reminder service so you will receive a call when your cartridges are up for renewal to let you know your cartridges need changing.

For advice call: 020 8539 4707