

# Oasis & Delta Whole House Systems

## Cartridge Removal and Replacement Instructions

### Free Cartridge Reminder Service

The pre-filter should be changed every six months whilst the carbon block and heavy metal cartridges should be changed every 12 months.

When you purchase a filter/ cartridge from us you are automatically added to a free reminder service so you will receive a call when your cartridges are up for renewal to let you know your cartridges need changing.



1. Position a suitable receptacle under the system to catch residual water. Then using the plastic spanner (1) supplied with the system to shut off the water supply by rotating the ring of the housing until the arrows on all of the housings point to 'OFF' or 'BYPASS'.



2. Press the pressure release button on all housings (2).



3. Unscrew the bowl locking ring by turning to the left. To release the ring, it may be necessary to give the spanners handle a rap with the heel of your hand



4. Carefully move the water-filled housing sump, lift out the cartridge and pour away the residual water.



5. Unpack the new cartridge, check the rubber seals (3) are securely in place at the end and position it in the plastic sump. Also ensure the sump 'O'Seal (4) is correctly positioned.



6. Carefully offer up the sump to the housing head and screw the blue ring on by hand. Tighten firmly with the spanner but do not use excessive force.



7. Turn the housing indicator rings to point to the 'FILTER' position. Check carefully for leaks and your filter is ready to use again.

For advice call: 020 8539 4707